



Directions for Use

The Incredible Egg Washer™

Manufactured by **Fall Harvest Products™**

Model #1

SKU# 87611 00001

Patent Pending—All Rights Reserved ©2001-2006

The Incredible Egg Washer™ is Manufactured by **Fall Harvest Products™**.

24 Holt Road, P.O. Box 302, Manchaug MA USA 01526-0302
Toll Free 1-888-852-5340 - Toll Free FAX 1-877-455-4647
Tel. 1-508-476-0084 - FAX 1-508-476-7703

For Replacement Parts & Information:

Email: Info@TheIncredibleEggWasher.com Web: www.TheIncredibleEggWasher.com

Patent Pending—All Rights Reserved ©2001-2006

The Incredible Egg Washer®

Directions for Use

1. Rinse The Incredible Egg Washer® with hot water prior to use to remove any debris.
2. Fill egg washer with 3-gallons of 90-100 degree F. water.
3. Add Egg Wash powder per directions on egg wash detergent container.
4. Insert 10-inch egg basket with eggs properly spaced so as to have the top layer of the eggs as flat as possible.
5. Weight discs are provided to hold the eggs in place when washing them. Two discs are provided. Please use the disc that most closely fits the diameter of the basket at the top of the eggs in the basket. Gently lay the weight disc on the eggs. Be sure to use the disc that fits best for the height of the eggs. The smaller diameter disc should be used when there are just one or two layers of eggs, and the larger diameter disc should be used if the basket is more than half full of eggs. Use only one weight disc when washing eggs. Add water as necessary to be 1 or 2 inches above eggs.
6. Affix the enclosed air chuck assembly to your air compressor hose. Attach the screw-on air chuck to the air valve at the base of The Incredible Egg Washer® and start air compressor. Use only the air chuck furnished with the egg washer, as it contains a one-way check valve to prevent egg-cleaning solution from backing up into the air compressor when the compressor is off. Use of any other air chuck may cause damage to your air compressor.
7. Set airflow with regulator on air compressor outlet to create a turbulent, **but not violent**, bubbling action in the egg washer. Too much air flow will cause eggs to bounce and crack. Ideal airflow is 2 c.f.m. (cubic feet of air per minute). *(Fall Harvest Products distributes a small air compressor that is sized exactly for this application. It weighs 5 lbs., operates on house current (120 volts), and pressure is pre-set. Dealer locations may be found at www.FallHarvestProducts.com or calling toll free to 1-888-852-5340).*
8. Cover egg washer loosely with cover to avoid splashing water. Do not snap cover down over lip. For your safety, in event that cover is inadvertently snapped down over the lip, air pressure will not build up in The Incredible Egg Washer®. Vent holes have been provided near the top of

- the rim to vent excess air. Wash water may occasionally drip from these holes. DO NOT BLOCK THESE HOLES!
9. After approximately 10-15 minutes, or sooner if eggs appear clean, stop air compressor and remove air hose. Remove cover, egg basket, and let eggs drain in sink while in the basket. Dump wash water and rinse out The Incredible Egg Washer®.
 10. Fill with 3 gallons of 90-100 degree rinse water with no additives or chemicals in the water. Put egg basket with eggs back into The Incredible Egg Washer® in the rinse water. Cover egg washer. Affix air chuck to the valve stem and start air compressor. Run for at least 3 minutes to allow eggs to get a good rinse with the turbulent water. Shut down as in Step #9.
 11. Remove egg basket from rinse water, remove weight disc and run warm tap water over eggs while still in basket to complete a final rinse. Remove and inspect eggs. Any eggs that still have debris on them may be hand washed with the egg brush or egg scrubbing pad under running warm water and loosened debris will be easily removed.
 12. Dry eggs on towels or air dry in basket and immediately store under refrigeration.
 13. Rinse and clean The Incredible Egg Washer® with hot water, being sure to remove any heavy debris that may have sank to the bottom during the wash or rinse. Towel dry, being careful not to disturb the delicate air tube at the bottom. Rinse the egg basket, weight discs, and egg brush. After drying these items, put them inside and cover The Incredible Egg Washer® so that it will be clean for next use. If the air chuck assembly can be removed from the air hose, then remove it and store it in a plastic zip lock bag or wrap it in a paper towel and store it in the egg washer so you don't lose it. Please store The Incredible Egg Washer® away from children. It is not a toy and must remain clean for next use.



CAUTION: As with any 5-gallon pail, use caution around children. Children, especially young children, may drown by tipping top-heavy into the pail and not be able to get righted without assistance! Never use The Incredible Egg Washer® out of your presence when children may have access.