

## ASSEMBLY INSTRUCTIONS FOR ROLL-10



KEY DISCRPTION	PART #	QUANTITY
A TOP	1	1
B RIGHT PARTITION	2	1
C LEFT PARTITIONS	3	5
D FRONT PANELS WITH WASTE GUARD	4	2
E THIN STRIP WITH NOTCHES	5	1
F THIN STRIP WITHOUT NOTCHES	6	1
G TOP BACK PANEL WITH NOTCHES	7	1
H LOWER BACK PANEL WITHOUT NOTCHES	8	1
I SHORT PERCH ARM	9	4
J PERCHES	10	2
K NEST BOTTOMS	11	10
L ROLL OUT NEST BOTTOMS	12	10
M HARDWARE PACK **	ROLL 10HP	SEE BELOW

### CONTENTS:

3/16 POP RIVETS	73
10-24X1/2 BOLTS	12
10-24 NUTS	12
1/4-20X 1-1/4 HEX BOLTS	8
1/4-20 NUTS	8
HANGING BRACKETS	2

\*\* EXTRA HARDWARE MAY BE INCLUDED


**STEP 1 LAY PANELS ON BACK EDGE (LONGEST SIDE)  
AND ATTACH TOP**



**STEP 2 FLIP NEST ON FRONT EDGE (SHORT SIDE) AND ATTACH  
BACK PANELS TO NEST. PANEL WITHOUT NOTCHES IS TO BE  
INSTALLED ON BOTTOM EDGE ,AND PANEL WITH NOTCHES IS TO  
BE ATTACHED ABOUT MID WAY UP THE BACK OF NEST.**




**NOW IS ALSO A GOOD TIME TO ATTACH HANGING BRACKETS ON LEFT  
AND RIGHT BACK CORNERS WITH 10-24X1/2 BOLTS**

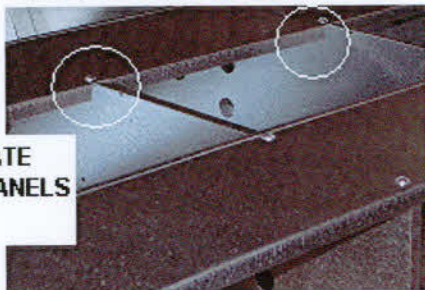

**WHITE CIRCLES INDICATE  
WHERE NOTCHES IN PANELS  
ARE**


**STEP 3 PLACE NEST AGAIN ON BACK EDGE TO ATTACH FRONT PANELS WITH WASTE GUARDS AND THIN STRIPS WITH AND WITHOUT NOTCHES. FROM THE BOTTOM START WITH THE THIN STRIP WITHOUT NOTCHES THEN A PANEL WITH WASTE GUARD NEXT. AT THE NEXT SET OF HOLES ON FRONT EDGE LINE UP THIN STRIP WITH NOTCHES, AND FINALLY ABOVE THAT PLACE LAST PANEL WITH WASTE GUARD**

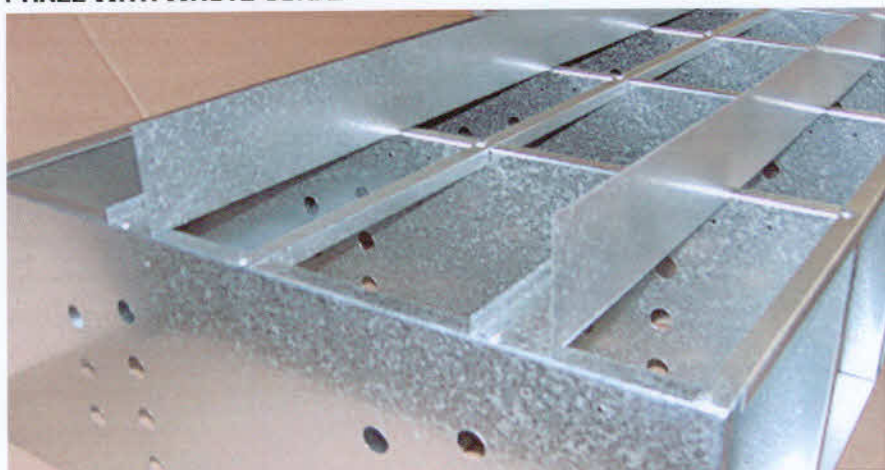

**STEP 4 PUT PERCH BRACKETS THROUGH SQUARE HOLES IN FRONT PANELS AND ATTACH WITH 10-24X1/2 BOLTS TO UPRIGHT PARTITIONS 2 AND 5.**



**STEP 5 BOLT PERCHES TO BRACKETS USING 1/4-20X1-1/4 BOLTS PROVIDED.**

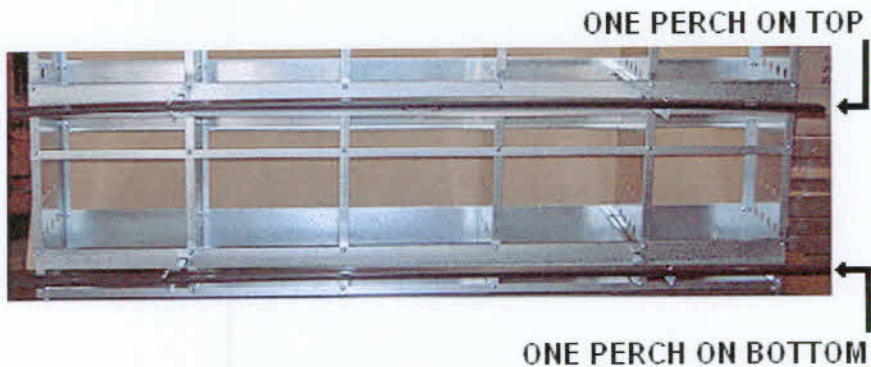

**STEP 6 PLACE NEST BOTTOMS IN EACH OF THE TEN COMPARTMENTS WITH CREASE RUNNING FROM FRONT TO BACK**



**STEP 7 ROLL OUT NEST BOTTOMS ARE INSTALLED BY PUTTING THEM THROUGH THE BACK OF THE NEST SO THEY GO THROUGH THE FRONT UNDER THE WASTE GUARD AND THE BACK RESTS ON TOP OF THE BACK PANELS**

