



# Instructions for Installing #7200 Forced Air Fan for #9200 Still Air Incubator (Optional Accessory)

## WARNING: UNPLUG INCUBATOR FROM POWER SUPPLY BEFORE PROCEEDING

1. Locate holes "A" and "H" on the top portion of your incubator's cover. (See diagram #1.) Note that the holes are cored only half way through. Using a 16 penny nail or Phillips head screwdriver of a smaller diameter than the holes, carefully push through to open the holes.

2. Remove 2 washers and 2 screws from parts kit and insert through top of incubator. (See diagram #1.) Remove "Forced Air Fan" from carton and install on the inside of cover, making sure the wires from the motor are facing the Heater Control Assembly. (See diagram #2.) Secure screws firmly but do not over tighten.

3. Study Wiring Diagram #2, which shows the location of "Forced Air Fan" and where to connect the two wire leads. Note that the two lead wires coming off the "Forced Air Fan" are fitted with Instant Auto Electric Connectors (IAEC). (See diagram #3) Be careful not to accidentally pull the IAEC off the wire. Take one of the IAEC and snap over one of the 120 Volt Power leads into the slot on the side of the IAEC. Squeeze U contact down with plier until flush with top. (See diagram #2 + 3) Close plastic hinge securely. Attach the 2nd IAEC to the other side of the 120 Volt power lead in the same manner.

4. Turn incubator cover over and plug in. Note: Forced Air Fan will run continually whenever unit is plugged into power supply.

5. Put the enclosed red label near the vent hole "C" to remind you that your Still Air incubator is now a "Circulated Air incubator and should be operated at 99.5° degrees Fahrenheit for all types of eggs."

### • IMPORTANT •

Because of the heat generated by the 7200 Forced Air Fan, incubators with fans installed will operate below the 65° limit. However, also because of the heat generated, the fan should not be used where the room temperature rises close to 90°.

**RUN INCUBATOR ACCORDING TO THE ENCLOSED OPERATING INSTRUCTIONS FOR THE MODEL NO. 9200 INCUBATOR.**

**CAUTION: KEEP HANDS CLEAR OF FAN BLADES**

Incubator Cover Diagram

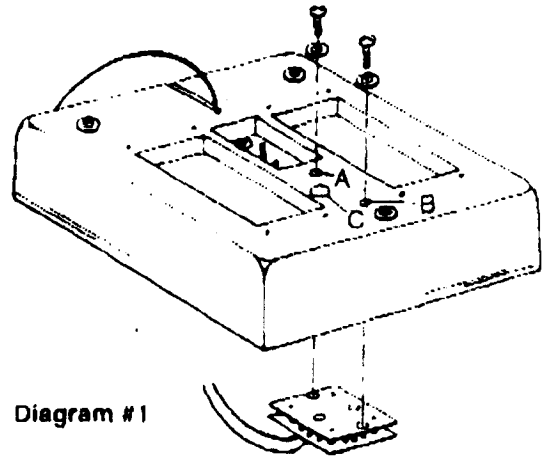


Diagram #1

Forced Air Fan Diagram

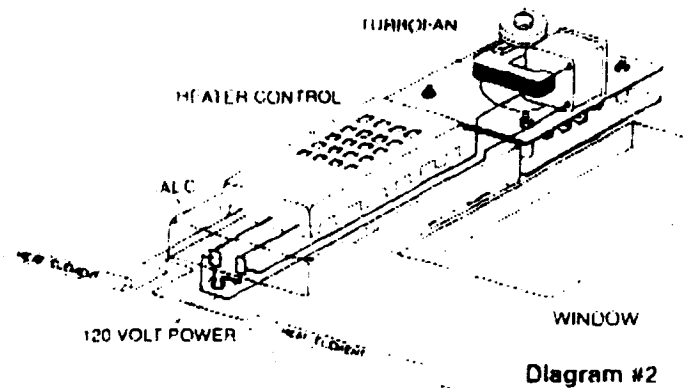


Diagram #2

Instant Auto Electric Connector

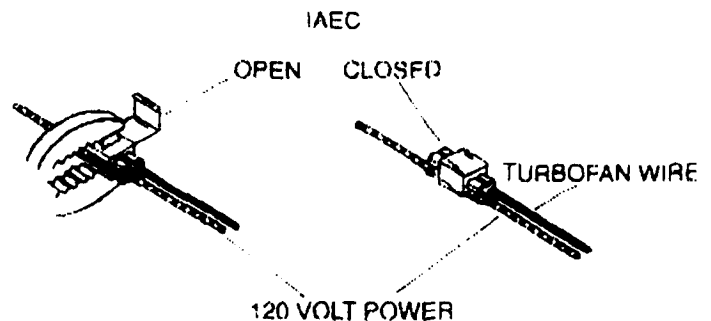


Diagram #3